

DuPont™ Cyclotene™ 3000 Series

Dry Etch Resin

Processing Procedures for Advanced Electronics Resins

Regional Product Availability


- North America
- Europe, Middle East and Africa
- Latin America
- Asia-Pacific

Introduction

The Cyclotene™ 3000 Series Advanced Electronics Resins derived from B-staged bisbenzocyclobutene (BCB) monomers are dry-etch grades of the Cyclotene™ family of products, and were developed for use as spin-on dielectric materials in microelectronics device fabrication. The Cyclotene™ Resins are low dielectric constant and low dielectric loss materials, and feature low moisture absorption, no out-gassing, low temperature cure and excellent planarization (Figure 1). Properties of the Cyclotene™ products are given in Table 1. The Cyclotene™ Resins have been widely adopted in a variety of electronics applications, including silicon and compound semiconductor passivation, interlayer dielectric, flat panel displays, IC packaging, integrated passives, MEMS, wafer bonding and 3D integration, and optoelectronic components. There are four formulations of the Cyclotene™ 3000 Series products which are commercially-available from DuPont, as shown in Table 2.

An additional dry etch product, XUS 35077.00 type O2, was designed for flat panel display applications. Please refer to our processing guide “Technical Processing Guide for Flat Panel Display Applications” for more information on that product.

Figure 1. Planarization ratio as a function of metal line width for dry etch grade BCB. The metal line height is 4 µm.

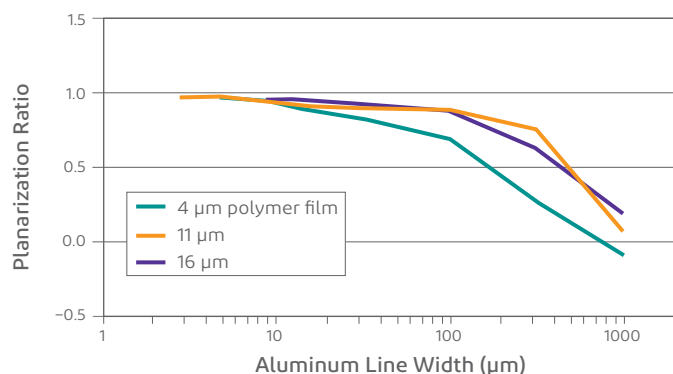

Storage

The Cyclotene™ 3000 Series Resins as well as the ancillary chemicals, including adhesion promoters (AP3000), rinse solvent (T1100), and stripper (Primary Stripper A) are stored at room temperature. The shelf life for Cyclotene™ 3000 Series Resins at room temperature is two years from the date of manufacture.

Table 1. Thermal, Electrical and Mechanical Properties of Cyclotene™ 3000 Series Resins

| Property | Measured Values |
|-----------------------|---|
| Dielectric Constant | 2.65 at 1-20 GHz |
| Dissipation Factor | 0.0008 |
| Breakdown Voltage | 5.3 x 10 ⁶ V/cm |
| Leakage Current | 6.8 x 10 ⁻¹⁰ A/cm ² at 1.0 MV/cm ² |
| Volume Resistivity | 1 x 10 ¹⁹ Ω-cm |
| Thermal Conductivity | 0.29 W/m ² °K at 24 °C |
| CTE | 42 ppm/°C at 25 °C |
| Tensile Strength | 87 ± 7 MPa |
| Tensile Modulus | 2.9 ± 0.2 GPa |
| Elongation | 8 ± 2.5 % |
| Poisson's Ratio | 0.34 |
| Residual Stress on Si | 28 ± 2 MPa at 25 °C |
| Tg | > 350 °C |
| Moisture Absorption | < 0.2% |

Table 2. Formulations of the Cyclotene™ 3000 Series Products

| Solution Properties | 3022-35 | 3022-46 | 3022-57 | 3022-63 |
|--------------------------|------------|------------|------------|------------|
| Solvent | Mesitylene | Mesitylene | Mesitylene | Mesitylene |
| Viscosity (cSt at 25 °C) | 14 | 52 | 259 | 870 |
| Thickness Range* (µm) | 1.0–2.4 | 2.4–5.8 | 5.7–15.6 | 9.5–26.0 |

*The thickness data given above should not be construed as product specification.

Equipment Selection

Pressurized Dispense

In pressurized dispense, either nitrogen or helium can be used. Helium is less soluble than nitrogen in resin solutions under pressure and causes fewer bubbles than nitrogen during dispense and spin coating. Pressure should be released when the resin is not in use.

Cup Rinse and Exhaust

Cup rinse is recommended at the end of a cassette to prevent the spun-off resin from drying on the cup surface and becoming a source of particles. Cup exhaust should be turned on throughout the entire coating process to evacuate the solvent vapor and to keep mist and polymer fibers below the wafer surface.

Materials for Delivery System

Teflon is the recommended material for the components of the Cyclotene™ Resin delivery system, which include delivery lines, bottles, cap adapters, and filters. Kalrez is recommended for O-rings and elastomeric components. HDPE is not compatible with the mesitylene solvent.

Waste Dispose

It is recommended to dispose the waste into a container for organic solvents.

Spin-Coating Process

Figure 2 depicts a typical process flow of Cyclotene™ Resins on a planar substrate. The detail of the procedure for each of the steps will be described below.

Surface Preparation

The surface of substrates to be coated with Cyclotene™ Resin should be free of inorganic particles, organic residues and other contaminants. Particles and residues cause coating defects and may lead to subsequent adhesion problems. A brief treatment of O₂ plasma followed by DI water rinse is usually sufficient for general cleaning purposes. If polyimide is present on the substrate, a dehydration bake (e.g., oven or hotplate bake at a temperature of 150 °C or higher) followed by oxygen plasma treatment prior to Cyclotene™ Resin coating is necessary to facilitate good adhesion.


Adhesion Promoter

Adhesion promoter is always recommended prior to Cyclotene™ Resin coating. The procedure for applying adhesion promoter on a substrate comprises dispensing, spreading (e.g., 50–300 RPM for 5 seconds), and spin-drying at 3,000 RPM for 10–20 seconds. Baking adhesion promoter prior to Cyclotene™ Resin coating is usually not required, but it can improve the adhesion of resin to certain substrates. The adhesion promoter available from DuPont, AP3000, is effective on most surfaces, including silicon oxide, silicon nitride, silicon oxynitride, aluminum, copper and titanium.

Please refer to our application note “Processing Procedures for BCB Adhesion” for more details on BCB adhesion to other materials.

NOTE: Vapor prime adhesion promoters developed for photoresists (e.g., HMDS) do not work with the Cyclotene™ family of resins.

Figure 2. Typical process flow steps for depositing Cyclotene™ films on a substrate.

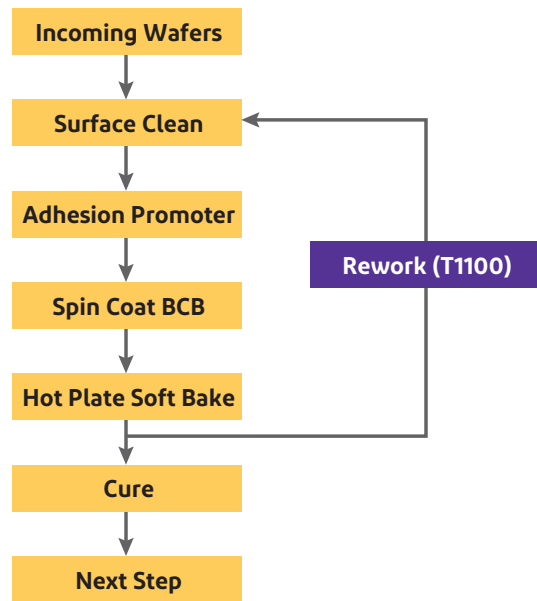

Resin Coating

Following the adhesion promoter process, Cyclotene™ resin is spun onto the substrate. The coating process is comprised of the following steps: dispense; spread; spin coat; backside rinse; topside (EBR); spin dry; and soft bake. The details for each of the steps are described below.

1. Dispense

Dispense of Cyclotene™ resin can be done statically or dynamically (rotating the substrate at a speed of 50–200 rpm). For optimal material usage it is helpful to dispense the resin radially from the edge of the wafer to the center, particularly for the higher viscosity formulations. The dispense volume will depend on the size of the substrate and the topography of the substrate surface. Slightly greater dispense volume is often required with increasing topography for a given substrate size.

2. Spread

Increase the substrate rotation speed to approximately 500–750 rpm for 5–7 seconds to spread the resin out from the center of substrate.

3. Spin Coat

Increase the substrate speed to a rate which is appropriate to achieve the desired coating thickness. **Table 3** lists the correlation between cured film thickness and spin speed for each of the Cyclotene™ 3000 Series Resins. Note that these data are for an open bowl spin coater. When using a covered coater, film thickness will depend on both spin speed and spin time, and will generally be thinner than the values in **Table 3**.

4. EBR and Backside Rinse

Adjust the substrate speed to about 500 rpm and dispense the EBR solvent (T1100) for 5–10 seconds to remove the edge-bead (about 1.5 mm from the edge of the wafer) from the top side of the substrate and to remove any contamination from the backside of the substrate. Top side edge-bead removal not required, but it is recommended. The backside rinse (BSR) should not be omitted. The top side EBR and backside rinse can be performed sequentially or simultaneously.

5. Spin-Dry

Following the EBR and backside rinse, the substrate is spun at 2,000 rpm for 20–30 seconds to dry the backside of the substrate.

6. Bake

After the spin coating process, the Cyclotene™ film should be baked on a hotplate to remove solvents and to “stabilize” the film in order to avoid material flow during subsequent handling and curing. The temperature and time for the bake of the Cyclotene™ Resins are not critical. The hotplate temperature can be set from 80–150 °C and the time can be as short as 60 seconds.

Table 3. Thickness After Cure (in μm) vs. Spin Speed

| Spin Speed (RPM) | Cyclotene™ 3022-35 Resin | Cyclotene™ 3022-46 | Cyclotene™ 3022-57 | Cyclotene™ 3022-63 |
|------------------|--------------------------|--------------------|--------------------|--------------------|
| 1,000 | 2.26 | 5.46 | 13.8 | 26.2 |
| 1,500 | 1.84 | 4.39 | 10.7 | 19.9 |
| 2,000 | 1.59 | 3.76 | 9.04 | 16.5 |
| 2,500 | 1.43 | 3.35 | 7.97 | 14.4 |
| 3,000 | 1.30 | 3.05 | 7.21 | 12.9 |
| 3,500 | 1.21 | 2.82 | 6.65 | 11.8 |
| 4,000 | 1.13 | 2.63 | 6.20 | 10.9 |
| 4,500 | 1.07 | 2.48 | 5.84 | 10.2 |
| 5,000 | 1.01 | 2.35 | 5.55 | 9.64 |

NOTE: The data given above are not to be construed as product specifications.

Thermal Cure

After coating and bake, the films are cured to achieve their final properties. The cure of Cyclotene™ Resins can be performed using a variety of tools, including convection oven, vacuum oven, tube furnace, reflow belt oven, and hotplate. Except for early outgassing of residual solvent, Cyclotene™ Resins do not evolve volatiles during cure, thus there are no constraints on the heating rate. (However, note that optimum planarization is achieved with a relatively slow ramp.) The only constraint is that, since films of Cyclotene™ Resin are susceptible to oxidation at elevated temperature (≥ 150 °C), the cure must be carried out under an inert atmosphere, with an oxygen concentration below 100 ppm. This condition can be readily achieved by flowing inert gas (nitrogen or argon) through a convection oven, tube furnace, or by using a vacuum furnace or oven. Cyclotene™ Resins can flow during the cure process. For optimum thickness uniformity, the substrates should be cured in a horizontal orientation.

Soft Cure

The soft or partial cure for the Cyclotene™ family of resins is designed to reach approximately 80% conversion (polymerization) and it is used for successive coating of the resin (i.e., double or triple coats) or multilayer structures (e.g., Cyclotene™ Resin/metal/Cyclotene™ Resin) in which the two Cyclotene™ Resin layers are in contact. See **Table 4** for a recommended partial cure profile in a convection oven.

Hard Cure

The hard or full cure is typically carried out as final cure after all polymer layers of the device structure have been completed, and it is designed to achieve 95–100% conversion. A typical suggested profile for hard cure is 250 °C for one hour in a box oven or furnace. See **Table 4** for a recommended full cure profile in a convection oven. Cure of Cyclotene™ Resins at a temperature higher than 250 °C does not adversely affect the properties of the film, but the temperature should not exceed 350 °C. **Figure 3** presents the extent of cure as a function of cure time and temperature.

Figure 3. The extent of Cyclotene™ Resin cure as a function of temperature and time.

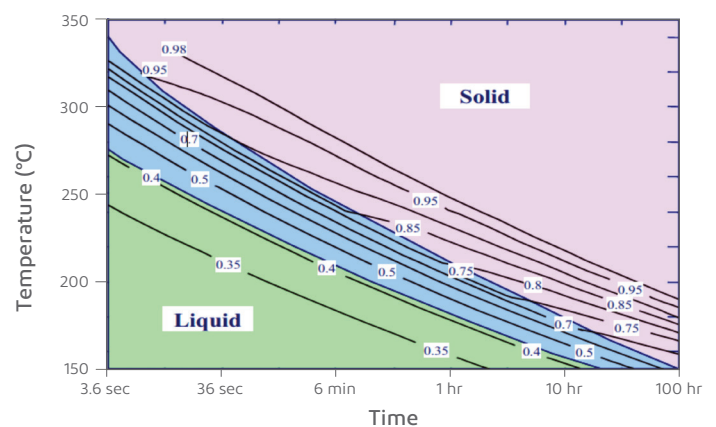


Table 4. Oven Cure Profiles for Cyclotene™ 3022 Resin

| Step | Partial Cure | Full Cure |
|------|--------------------------|--------------------------|
| 1 | 15 minute ramp to 100 °C | 15 minute ramp to 100 °C |
| 2 | 15 minute soak at 100 °C | 15 minute soak at 100 °C |
| 3 | 15 minute ramp to 150 °C | 15 minute ramp to 150 °C |
| 4 | 15 minute soak at 150 °C | 15 minute soak at 150 °C |
| 5 | 60 minute ramp to 210 °C | 60 minute ramp to 250 °C |
| 6 | 40 minute soak at 210 °C | 60 minute soak at 250 °C |
| 7 | Cool to <150 °C | Cool to <150 °C |

Rework

For rework of a Cyclotene™ film after bake and prior to cure, T1100 is the recommended solvent. This can be done by dispensing T1100 on the track, or by immersing the substrate in a T1100 bath at room temperature. The Cyclotene™ films after soft cure can be removed by immersing the film in a Primary Stripper A bath at 90–100 °C. Removal rate of soft cured Cyclotene™ film increases with higher bath temperature, and is about 2 μm/hour at 90 °C and about 6 μm/hour at 100 °C. After the stripping process with Primary Stripper A, the substrate should be rinsed with isopropanol, followed by DI water rinse and dry. An O₂/CF₄ plasma treatment after strip and rinse will help to completely remove any organic residues. Fully cured Cyclotene™ films are highly resistant to most chemicals, which makes them difficult to remove. Once the film is fully cured, plasma stripping (oxygen/fluorine plasma) is usually the only viable means of removing it. A piranha (H₂O₂/H₂SO₄) or fuming nitric acid bath will remove fully cured Cyclotene™ films, but metals and underlying device structures will generally not tolerate such an aggressive cleaning agent.

Please refer to the application note “Rework Procedures for Cyclotene™ 3000 Series and 4000 Series Resins” for more details on rework.

Plasma Etch

Pattern definition of films made with the Cyclotene™ 3000 Resins can be accomplished by means of a plasma etch process in conjunction with photoresist (PR) processing, and using either soft mask or hard mask approaches.

Etch Gases

The plasma used to etch Cyclotene™ Films generally requires both oxygen and fluorine species since silicon is present in the backbone of the polymer. A mixture of oxygen and a fluorine-containing gas (CF₄, C₂F₆, C₄F₈, SF₆, NF₃, etc.) has been found to produce a controlled etch rate using parallel plate or reactive ion etchers. Commonly used gas mixtures are 4:1 O₂/CF₄, or 5:1 O₂/SF₆. More fluorine can increase Cyclotene™ film etch rate initially, but when the fluorine component exceeds a certain limit, the etch rate decreases. **Figure 4** shows etch rate vs gas composition in O₂/CF₄. SF₆ tends to give faster etch rates than CF₄. Maximum etch rates are achieved with about 55–60 % CF₄

in O₂ [1], or about 20% SF₆, or about 20% NF₃ [2]. Though it is generally not recommended, etching of Cyclotene™ Resins in O₂ without any fluorine has been reported. [3].

An inert gas (N₂ or Ar) can be also added to the reactor to increase the overall pressure in the chamber and moderate the chemical vs. physical components of the plasma. As a result, both etch profile and etch uniformity can be improved. Adding more inert gases can lead to an increased etch rate and higher etch selectivity of Cyclotene™ Resins over CVD oxide and nitride. Lower concentrations of fluorine also give better selectivity to nitride. Higher power and pressure can increase Cyclotene™ Resin etch rates, but may also lead to etch no uniformity. Soft cured and hard cured Cyclotene™ films show similar etch characteristics.

Etch Tools

A variety of etchers have been used. Both reactive ion etchers (RIE) and inductively coupled plasma (ICP) tools have been used with good results. Downstream etchers have also been used. Barrel etchers are not recommended, because (a) the etch uniformity is quite poor, the etch rate being much greater at the edge than at the center, and (b) the lack of temperature control can lead to film surface oxidation and SiO₂ formation even when fluorine is present.

Soft Mask Process

In this process, the photoresist employed for pattern definition is also used as a sacrificial mask for BCB etching [4,5]. Etch selectivity between Cyclotene™ Resin and photoresist films is usually found to be about 1:1, so the resist thickness should be greater than the Cyclotene™ Resin thickness. Compatibility of the resist stripper with Cyclotene™ films should also be considered. **Figure 5** shows the etched thick Cyclotene™ film profile using O₂/CF₄ chemistry on Tegal’s 981 plasma etcher using a photoresist etch mask, showing sloped side wall profile and no visible etch residues. [6]

Hard Mask Process

Inorganic materials such as CVD dielectric films (SiO₂, SiN) or metal films (Al, Cr) can be used as a non-sacrificial mask for Cyclotene™ film etching. If an inorganic dielectric material is adopted for the hard mask, the hard mask layer can be retained as a part of the dielectric structure. Due to the presence of fluorine in the etch gas, there will be a finite etch rate of the hard mask material, and its thickness should take this into account. In the case of using a metal as the hard mask, the etchant used for the metal removal should be compatible with Cyclotene™ Resin. **Figure 6** shows etched via profiles in 1 μm thick Cyclotene™ film, using a 0.3 μm thick oxide hard mask, which was conducted with more complicated etch chemistry on a Lam TCP 9100 etcher. [7]

Figure 4: Etch rates as a function of gas composition for reactive ion etch process.

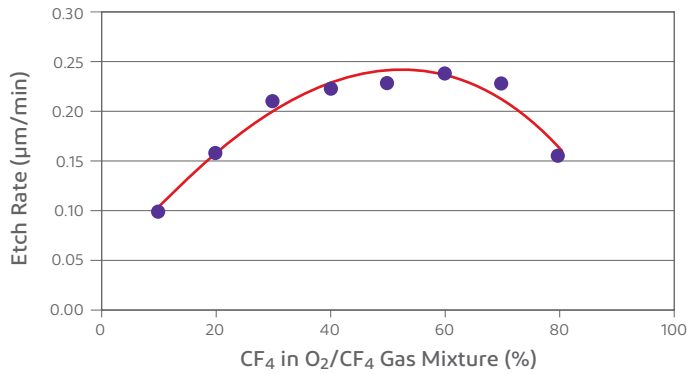


Figure 5. Field and sidewall view of etched thick Cyclotene™ 3000 Series Resin (7 µm) on Tegal's 981 plasma etcher. AZ-P4620 photoresist (15 µm) was used as soft mask.


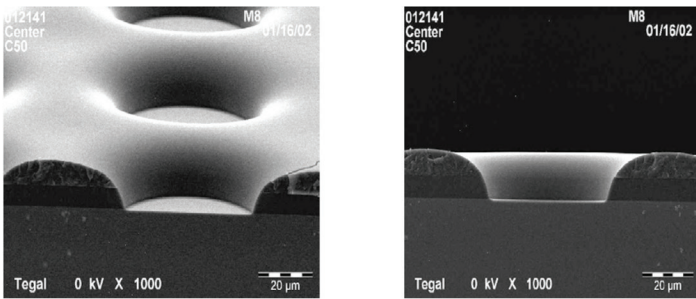


Figure 6. Sub-micron Cyclotene™ Resin via profile etched in a Lam TCP9100 etcher (Pressure: 10 mTorr, TCP Power: 1500 W, RF Power: 700 W, O₂: 18 sccm, C₂F₆: 2 sccm, N₂: 40 sccm).

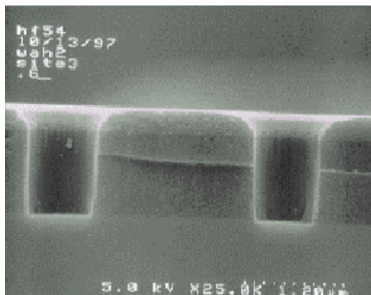

References

1. M. Schier, "Reactive Ion Etching of Benzocyclobutene Using a Silicon Nitride Dielectric Etch Mask," J. Electrochem. Soc., vol. 142(9), 1995, pp. 3238-3240.
2. M.R. Baklanov, S. Vanhaelemeersch, H. Bender, K. Maex, "Effects of oxygen and fluorine on the dry etch characteristics of organic low-k dielectrics," J. Vac. Sci. Tech., Vol. B 17(2), 1999, pp. 372-379.
3. M. Yu, H. Shan, A. Taylor, "Low k Film Etch in Applied Materials eMxP+ Chamber," Mat. Res. Soc. Symp. Proc. Vol. 544: Plasma Deposition and Treatment of Polymers, MRS, 1998, pp. 203-207.
4. B. Rogers, M.J. Berry, I. Turlik, P. Garrou, D. Castillo, "Soft Mask for Via Patterning in Benzocyclobutene," Int., Journal of Microcircuits and Electronics Packaging, 17(3), 1994, pp. 210-218.
5. P. Chinoy, "Reactive Ion Etching of Benzo-cyclobutene Polymer Films," IEEE Trans. On Components, Packaging, and Manufacturing Technology, Vol. 20(3), 1997, pp. 199 - 206.
6. J. Almerico, S. Ross, P. Werbaneth, J. Yang, P. Garrou,
7. J.M. Flanner, I. Morey, M.E. Mills, "Etching Characteristics of the Low Dielectric Constant Material Cyclotene™ 5021 (BCB) in the Lam TCP 9100 Etcher," Proceedings of VIMC Conference on Dielectric for ULSI Multilevel Interconnect," Santa Clara, 1998, Paper 32.

Handling Precautions

Before using this product, associated generic chemicals or the analytical reagents required for its control, consult the supplier's Material Safety Data Sheet (MSDS)/Safety Data Sheet (SDS) for details on material hazards, recommended handling precautions and product storage.

CAUTION! Keep combustible and/or flammable products and their vapors away from heat, sparks, flames and other sources of ignition including static discharge. Processing or operating at temperatures near or above product flashpoint may pose a fire hazard. Use appropriate grounding and bonding techniques to manage static discharge hazards.

CAUTION! Failure to maintain proper volume level when using immersion heaters can expose tank and solution to excessive heat resulting in a possible combustion hazard, particularly when plastic tanks are used.

Storage

Store products in tightly closed original containers at temperatures recommended on the product label.

Disposal Considerations

Dispose in accordance with all local, state (provincial) and federal regulations. Empty containers may contain hazardous residues. This material and its container must be disposed in a safe and legal manner.

It is the user's responsibility to verify that treatment and disposal procedures comply with local, state (provincial) and federal regulations. Contact your DuPont Electronic Materials Technical Representative for more information.

Product Stewardship

DuPont has a fundamental concern for all who make, distribute, and use its products, and for the environment in which we live. This concern is the basis for our product stewardship philosophy by which we assess the safety, health, and environmental information on our products and then take appropriate steps to protect employee and public health and our environment. The success of our product stewardship program rests with each and every individual involved with DuPont products—from the initial concept and research, to manufacture, use, sale, disposal, and recycle of each product.

Customer Notice

DuPont strongly encourages its customers to review both their manufacturing processes and their applications of DuPont products from the standpoint of human health and environmental quality to ensure that DuPont products are not used in ways for which they are not intended or tested. DuPont personnel are available to answer your questions and to provide reasonable technical support. DuPont product literature, including safety data sheets, should be consulted prior to use of DuPont products. Current safety data sheets are available from DuPont.



electronics.dupont.com

For more information on DuPont™ Cyclotene™ or other DuPont products, please visit our website.

The information provided in this data sheet corresponds to our knowledge on the subject at the date of its publication. It may be subject to revision as new knowledge and experience becomes available. This information is not intended to substitute for any testing you may need to conduct to determine for yourself the suitability of our products for your particular purposes. Since we cannot anticipate all variations in end-use and disposal conditions, DuPont makes no warranties and assumes no liability in connection with any use of this information. It is intended for use by persons having technical skill, at their own discretion and risk. Nothing in this publication is to be considered as a license to operate under or a recommendation to infringe any patent right.

CAUTION: Do not use in medical applications involving permanent implantation in the human body. For other medical applications, see "DuPont Medical Caution Statement," H-50102-5 and "DuPont Policy Regarding Medical Applications" H-50103-5.

DuPont™, the DuPont Oval Logo, and all products, unless otherwise noted, denoted with ™, SM or ® are trademarks, service marks or registered trademarks of affiliates of DuPont de Nemours, Inc. © 2019 DuPont de Nemours, Inc. All rights reserved.

Form No. 888-00006, Rev 0 (06/19)